

ALCAR TECH600
 Tyre Pressure Monitoring System Tool

User Guide



DOWNLOAD YOUR FREE TPMS DESKTOP

See page 25 for details ✓

FOREWORD

Thank you for choosing the TECH600. This manual will help you get your tool up & running and explains how to get the most out of all its great features.

If you need any further assistance, please visit the support pages on our website at www.bartecautoid.com

LIST OF CONTENTS

FOREWORD	2
LIST OF CONTENTS	3
IMPORTANT NOTICES	4
SAFETY PRECAUTIONS	5
BEFORE GETTING STARTED	7
KIT COMPONENTS.....	7
REGISTRATION.....	8
CHARGING TOOL.....	11
POWER ON/OFF SEQUENCE	11
ACCESSING COVERAGE FOR COMMERCIAL VEHICLES	11
HOME MENU	12
MORE TPMS INFORMATION.....	13
SELECT A VEHICLE TYPE.....	13
NEW SERVICE.....	15
1/6 CHECK SENSORS	16
2/6 PROGRAMMABLE SENSOR	18
3/6 RELEARN	20
4/6 OBD DIAGNOSTICS	22
5/6 TECHNICAL INFORMATION	23
6/6 REVIEW VEHICLE DATA.....	24
SETTINGS.....	25
CONNECTING TO A WIFI NETWORK.....	25
CONNECTING TO THE BLUETOOTH OBDII MODULE.....	26
TPMS DESKTOP	27
UPDATING THE TOOL VIA USB CABLE.....	29
UPDATING YOUR TOOL VIA WIFI	30
UPDATING THE OBD II MODULE	30
APPENDIX.....	31
TECHNICAL SPECIFICATION.....	32

IMPORTANT NOTICES

SAFETY DEFINITIONS

All **Danger**, **Warning**, **Important**, and **Note** messages must be followed for your safety. These safety messages are in the following form



DANGER: Means you may risk possible loss of life.



WARNING: Means you may risk possible bodily harm.

CAUTION: Means you risk damage to the vehicle or the tool.

These safety messages cover situations Bartec is aware of. Bartec cannot know, evaluate and advise you as to all the possible hazards. You must be certain that any conditions or service procedures encountered do not jeopardise your personal safety.

COPYRIGHT

No part of this manual may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Bartec.

DISCLAIMER

All information, illustrations, and specifications contained in this technical instruction manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without obligation to notify any person or organization of such revisions or changes. Further, Bartec shall not be liable for errors contained with the furnishing, performance or use of this material.

SAFETY PRECAUTIONS

Read carefully the installation, operating and maintenance instructions in the Operator's manual.

Do not allow unqualified persons to use this equipment. This will prevent injury to persons and damage to the equipment.

The work place must be dry, sufficiently lit and well ventilated.

Do not forget that breathing carbon monoxide (odourless) can be very dangerous and even fatal.

WHEN WORKING ON THE VEHICLE:

- Wear suitable clothing and act in such a way as to prevent industrial accidents.
- Before starting, check to be certain the gear shift is in neutral (or in PARK (P) if the transmission is automatic) and put the handbrake on and check to be sure the wheels are completely locked.
- Do not smoke or use naked flames when working on a vehicle.
- Wear safety glasses to protect your eyes from dirt, dust or metal chips.



DISPOSING OF EQUIPMENT

- Do not dispose of this equipment as miscellaneous solid waste but arrange to have collected separately.
- The re-use or correct recycling of electronic equipment (EEE) is important in order to protect the environment and human health.
- In accordance with European Directive WEEE 2012/16/EU, special disposal points are available for waste electrical and electronic equipment.
- Public administrators and producers of electrical and electronic equipment are involved in facilitating the re-use and recovery of waste electrical and electronic equipment through these collection activities and use of appropriate planning arrangements.
- Unauthorised disposal of waste electrical and electronic equipment is punishable by law with appropriate penalties.



DISPOSING OF BATTERIES

- The TECH 600 contains a Lithium Polymer rechargeable battery which is not accessible to the user.



WARNING

- Risk of fire or explosion if the battery is replaced by an incorrect type
- Batteries must be recycled or disposed of properly. Do not throw batteries away as part of normal refuse disposal.
- Do not throw batteries on to an open fire

CORRECT USE OF THE TOOL

- Do not expose the tool to excessive moisture.
- Do not use the tool near sources of heat or polluting emissions (stoves, ovens, etc.).
- Do not drop the tool.
- Do not allow the tool to come into contact with water or other liquids.

- Do not open the tool or attempt to perform maintenance or repair operations on any internal parts.
- You are advised to keep the packaging and to re-use it if the tool is moved to another site.
- Do not apply metallic labels to the rear of the tool as this may cause heat build up while charging and possible fire.

WHEN USING THE TOOL REMEMBER:

- Do not subject the tool to magnetic or electric interference.

RECEPTION, MAINTENANCE AND GUARANTEE:

Inspect the tool when delivered. Damage sustained during shipment is not covered by the guarantee. Bartec will accept no responsibility for material or bodily harm resulting from inappropriate use of the product, failure to maintain it, or incorrect storage conditions.

Bartec provides training for clients desirous of acquiring the knowledge required for the correct use of its products.

Only personnel authorized by Bartec are permitted to make any repairs that may be necessary.

This tool is guaranteed against any manufacturing fault for 12 months as of date of invoice (parts and labour) only if product has been correctly used. Serial number must stay readable and proof of purchase must be retained for presentation upon request.

Bartec Auto ID Ltd

Unit 9

Redbrook Business Park

Wilthorpe Road

Barnsley

S75 1JN

+44 (0) 1226 209226

BEFORE GETTING STARTED

1. Charging

NOTICE: Only use the power supply or USB cable that is included in the TECH600 tool kit to charge this tool. The use of un-approved power supplies may damage it and will void the tool warranty.

2. Registration

The Bartec TECH600 can be registered through the TPMS Desktop software, found at www.tpmsdesktop.eu. This allows the user to update the tool to the latest software through the method they prefer.

3. Update

Once the tool is registered through TPMS Desktop, verify the software level loaded to the level available online and update the tool if necessary. Updating through the TPMS Desktop is recommended.

4. Disconnecting from PC

NOTICE: Before disconnecting the tool from a PC, please ensure to “safely remove hardware” first, by locating the “Safely Remove Hardware” icon on the lower right hand side of the PC screen. This will prevent the data on the tool from being corrupted.

KIT COMPONENTS

The **TECH600** kit inside the tool box includes:

- TECH600 TPMS activation tool
- Bluetooth (BT) OBDII Module
- Qi Charging cradle
- USB cable
- Tool case

Identifying Kit Components and Features

The TECH600 tool is battery operated and generates a low-frequency magnetic field to activate tyre sensors. It receives UHF radio signals from the tyre sensors typically at 434MHz.



REGISTRATION

Automatic registration takes place when the tool is first turned on. Registration enables the notification of software updates and the ability to download update files to the tool. Once an account has been made with TPMS Desktop, the tool will be registered to that account, and the latest available updates will be downloaded.



Visit + Install
Öffnen + Installieren
L'ouvrir + Installer
Aprilo + Installare
Abrilo + Instalalo

tpmsdesktop.eu


Support: support@bartecautoid.com

Screen when you first turned the tool on.


To register a tool, navigate to the Bartec TPMS Desktop at tpmsdesktop.eu on your PC.



Download the TPMS Desktop software, and then install it using 'setup.exe'. When the TPMS Desktop has been load for the first time, the user will be presented with the following:

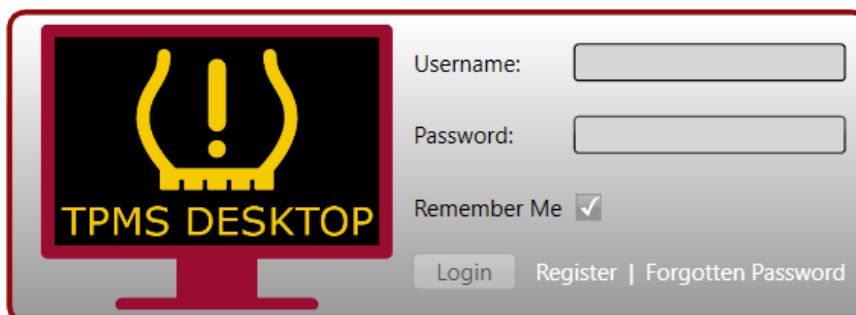

Select 'Register' to create a new account. The following screen will be displayed:

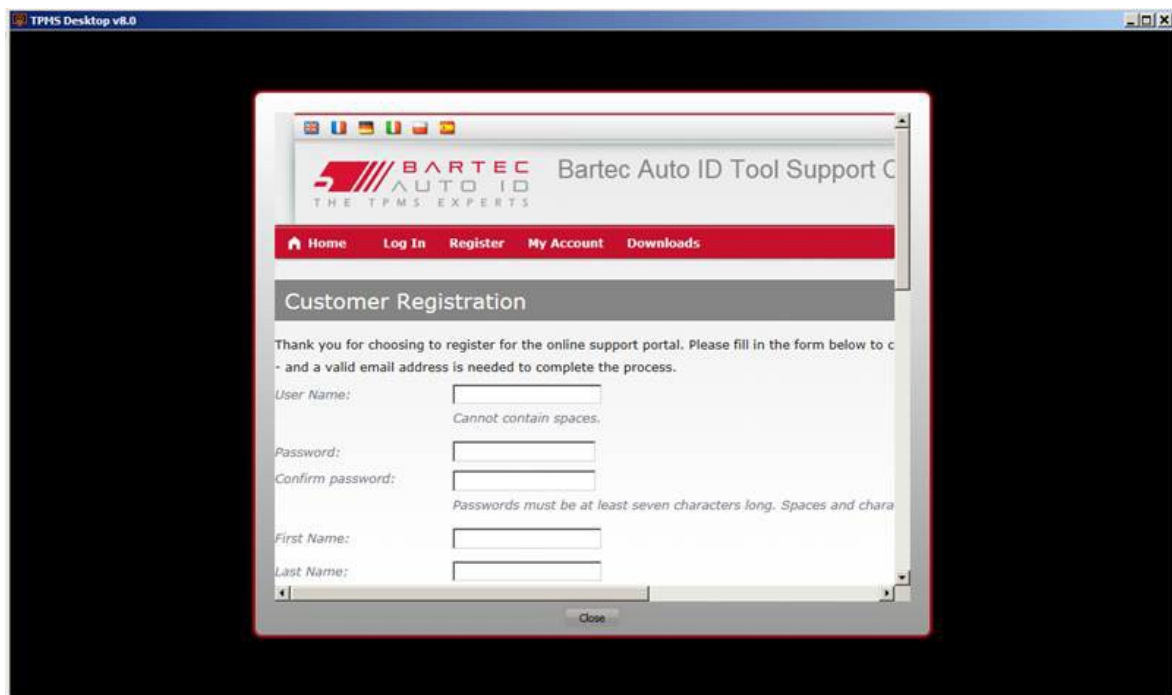


It is important to fill in all fields completely and accurately. This information will help Bartec remain in contact regarding updates and other important TPMS information. Choose a username (without a space) and password.


If the details are accepted, this message will show:




The following email should arrive within a few minutes:

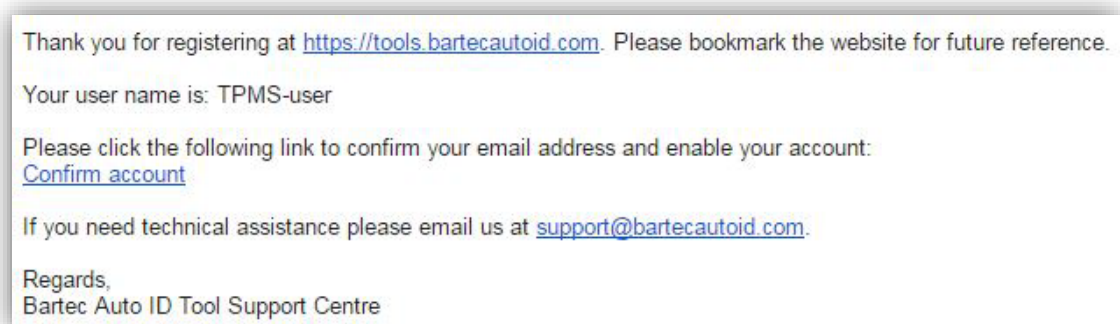

When clicking 'Confirm account' it will bring the user to the website and the following page will show that the registration was successful. Return to the TPMS Desktop to login.

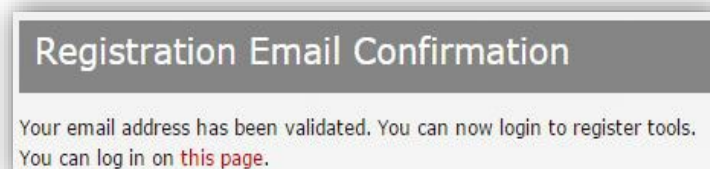


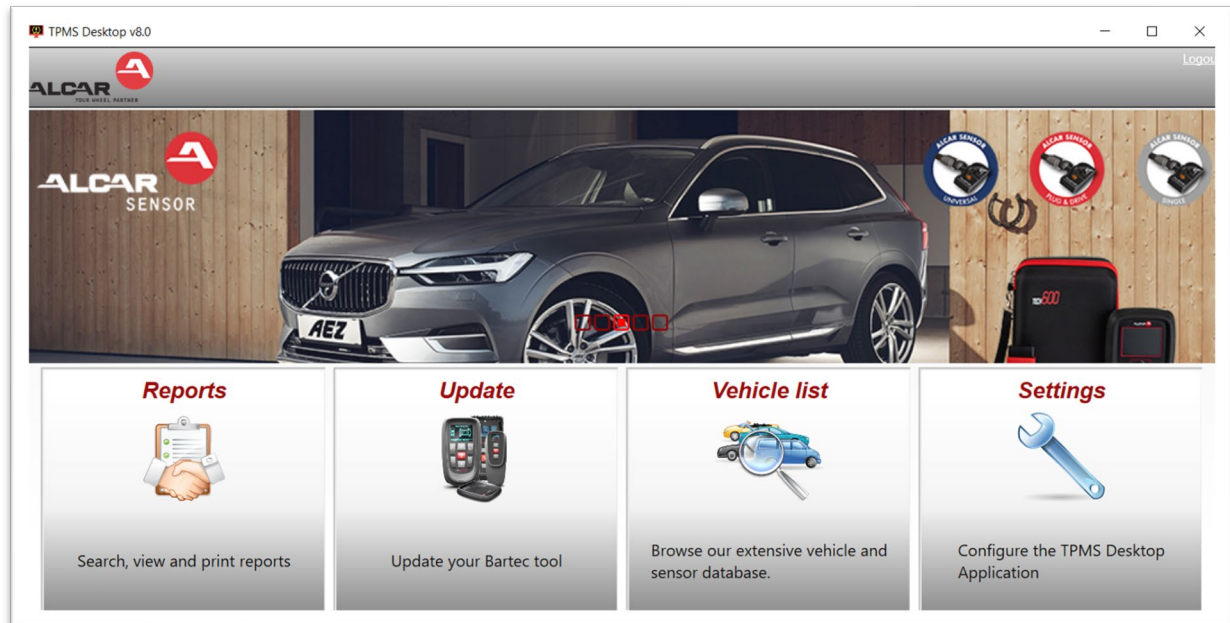

After Login, the main screen of the TPMS Desktop is displayed

Connect the TECH600 to the computer. The TPMS Desktop will automatically register the tool, and will display the message: “tool successfully registered”. The TPMS Desktop will then check for any updates that can be applied to the tool. Alternatively, the user can navigate to ‘Update’.

Once registered, the user will see the tool listed, along with a whether the tool is up to date:

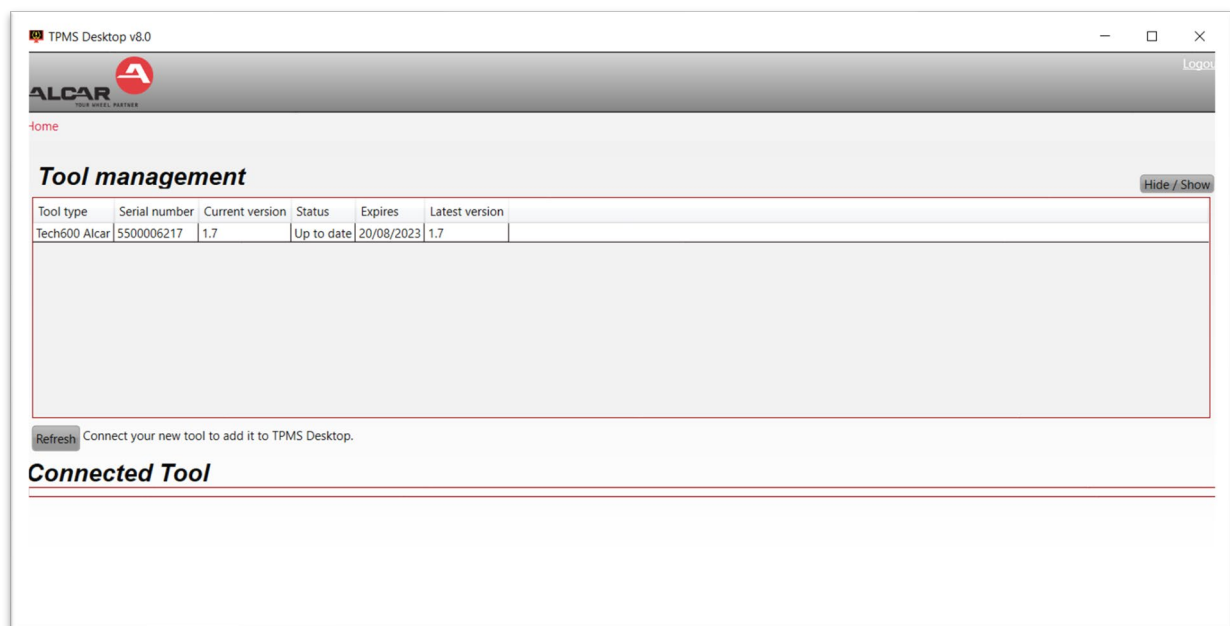



Updating the TECH600 and keeping it up to date using the TPMS Desktop is recommended.

CHARGING TOOL

The TECH600 is shipped with a charged battery. It is recommended that the tool is charged **2+ hours** before first use. For optimum performance, always keep it sufficiently charged.


The TECH600 will notify the user when the battery has low power, and the battery icon will change colour from white to red. When there is an insufficient amount of power remaining in the battery, the TECH600 will save all of the TPM Data and then power itself off.

POWER ON/OFF SEQUENCE


Press and hold the  power button for two seconds to power on the tool. To power off the tool, press and hold the  power button for three seconds. Auto power off is after 10 minutes of inactivity. This can be changed in the Settings menu.

The unit automatically powers up when the charger or USB port is in use – auto power off is not operational. The tool cannot be operated when plugged in.

ACCESSING COVERAGE FOR COMMERCIAL VEHICLES

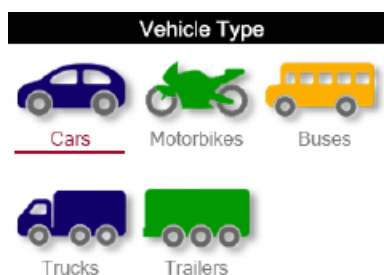


It is possible to purchase vouchers to unlock access to commercial vehicle coverage, including software for buses, trucks and trailers from your distributor. The icons the tool has no access to will be greyed out.

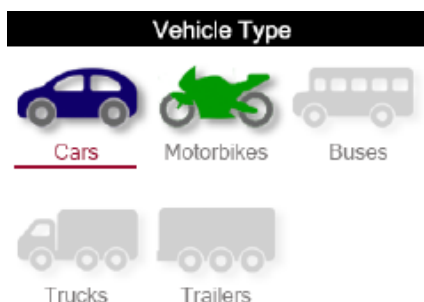

This upgraded software also provides the option to access the training function to learn how to read the inner wheel sensors on dual wheel axles, and access the wheel and axle positions guide.

HOME MENU

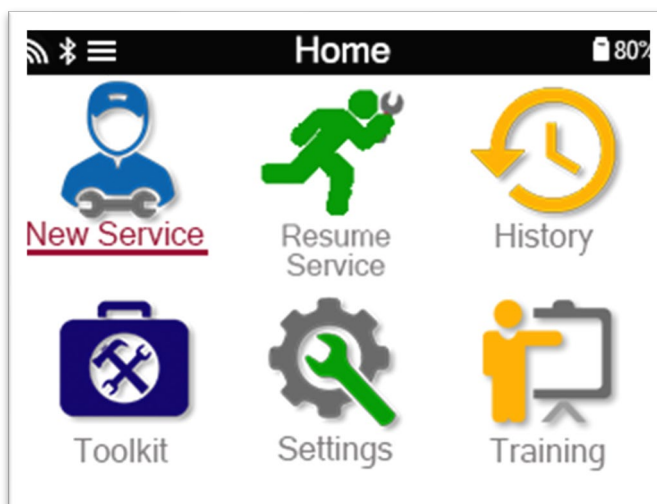

New Service

Used to check sensors, relearn sensors to the vehicle, perform OBD diagnostic, program sensors, and receive TPMS information



Resume Service

Used to resume your last job



History

Used to call up all stored works. User is able to search by registration or model, and can also use this history function to upload and clear Service Data.



Toolkit

Allows the user to test the signal strength of a keyfob (RKE Test), and test the strength of a UHF signal (UHF monitor).



Settings

Used to set up your personal settings in the tool - language, WiFi/Bluetooth, units, auto off, sound, etc.




Training


Used to get tips related to TPMS

MORE TPMS INFORMATION






If you see this icon on the screen press  for more TPMS information or TPMS options.

SELECT A VEHICLE TYPE

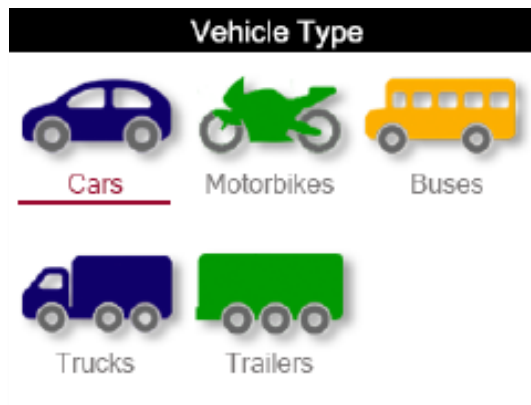


When starting a **New Service**, the user will be prompted to select the type of vehicle that requires TPMS maintenance. Upon selecting a vehicle type, the user will be guided through several menus to select brand, model and year, before selecting the service required.

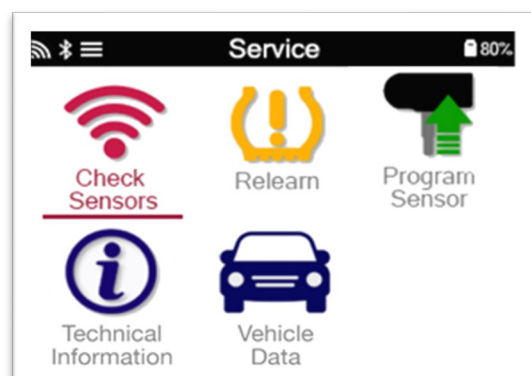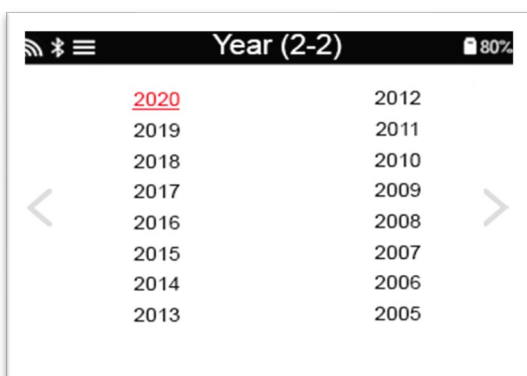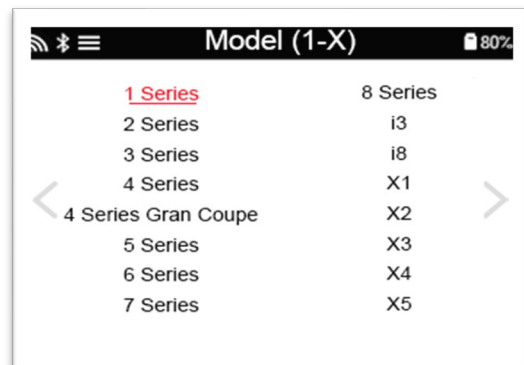


FOR COMMERCIAL VEHICLES ONLY;

Commercial vehicles, such as buses, trucks and trailers, have two additional menu screens that allow the user to select the number of axles the vehicle has, and the wheel configuration.

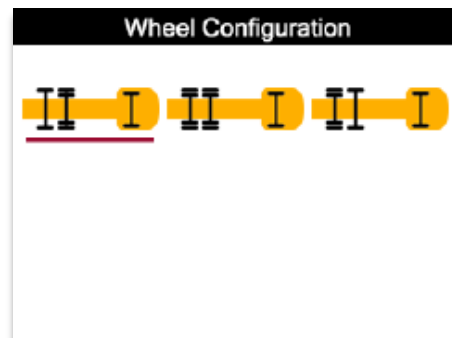

NEW SERVICE

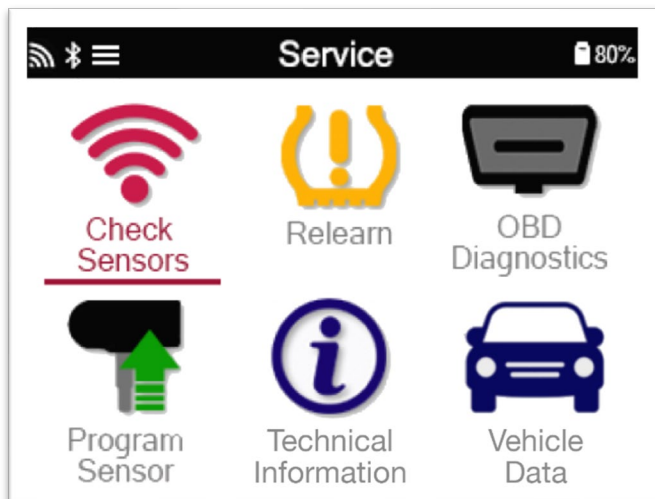

Services that are unavailable on the vehicle selected will not be displayed in the service menu.



Check Sensors

This uses a quick and easy to follow process which allows the user to read sensors, process the data, read battery status & IDs.



Relearn

All relearn procedures are available



OBD Diagnostics

Used to diagnose vehicle problems, receive sensor IDs and reads the vehicle VIN



Program Sensor

- Create
- Copy/clone ID (single)
- Copy/clone ID (set)
- Copy using stored data
- Enter ID manually
- Multiprogramming
- Identify Universal sensor



Technical Information

Detailed sensor & service kits information




Vehicle Data

Allows the user to review the service data captured with the TECH600

1/6 CHECK SENSORS


Use this function to test the fitted sensors before continuing with further steps.

To check the status of the TPMS sensors on the vehicle, select Check Sensors from the Service Screen. A screen similar to the following should be displayed:

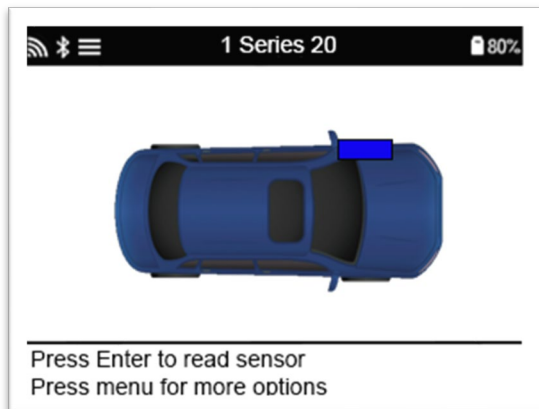

Use the arrow keys to select the sensor which needs to be read.

LF activated sensors

To test a sensor the tool should be placed alongside the valve stem and the 'Test'  key pressed.

Tool Positioning

Do NOT touch the metal rim. The tool needs to point through the rubber at the sensor.



(Note: with Ford Banded sensors the tool should be held 180°/opposite from the stem's position)

Tool Positioning for Dual Wheels on Commercial Vehicles

The sensor for the inner wheel can be located 180°/opposite from the sensor on the outer wheel.



To improve the reading of the inner wheel's sensor, please position the tool in between the outer and inner wheel, as close to the sensor as possible.






Non-LF activated sensors (some Beru sensors up to 2009)


If the tool requires rapid tyre deflation (of the order of 10psi or 0.5bar), then deflate the tyre and place the tool alongside the stem while pressing the test key.

During testing, the screen confirms the sensor type being tested and displays a progress bar. Different makes of Sensors respond at different speeds/ time intervals.

POSSIBLE READING SCENARIOS

Note that if a faulty Sensor has been replaced, some method of relearn procedure will need to be followed, as explained later in this manual.

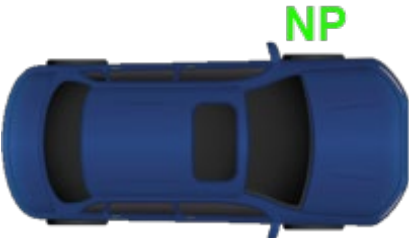
	<p style="text-align: center;">Successful Sensor Read</p> <p style="text-align: center;">Sensor was successfully activated and decoded. Displays pressure (in Bar or PSI) at wheel location.</p>
	<p style="text-align: center;">Failed Sensor Read</p> <p style="text-align: center;">No Sensor Activation or Decode. May be wrong sensor fitment or non-functioning sensor. Tool will prompt to attempt reading the sensor 3 times.</p>
	<p style="text-align: center;">Duplicate ID</p> <p style="text-align: center;">A Sensor with a duplicate ID has been read. Tool will direct to re-read those sensors.</p>
	<p style="text-align: center;">Wrong Sensor Type</p> <p style="text-align: center;">A Sensor was activated and decoded, but does not match the protocol for the Make Model Year that the tool was set-up for.</p>
	<p style="text-align: center;">No Pressure</p>

	<p style="text-align: center;">Low Sensor Battery Sensor's internal battery has dropped below a certain voltage threshold.</p>
---	---

2/6 PROGRAMMABLE SENSOR

The “Program Sensors” on the service menu enables the function of programming aftermarket replacement sensors like the HUF IntelliSens, Alcar Sensors or the Schrader EZ-sensor. Even when they are already mounted in a wheel or programmed to another vehicle.

The user can choose from a selection of sensors which match the preselected MMY.

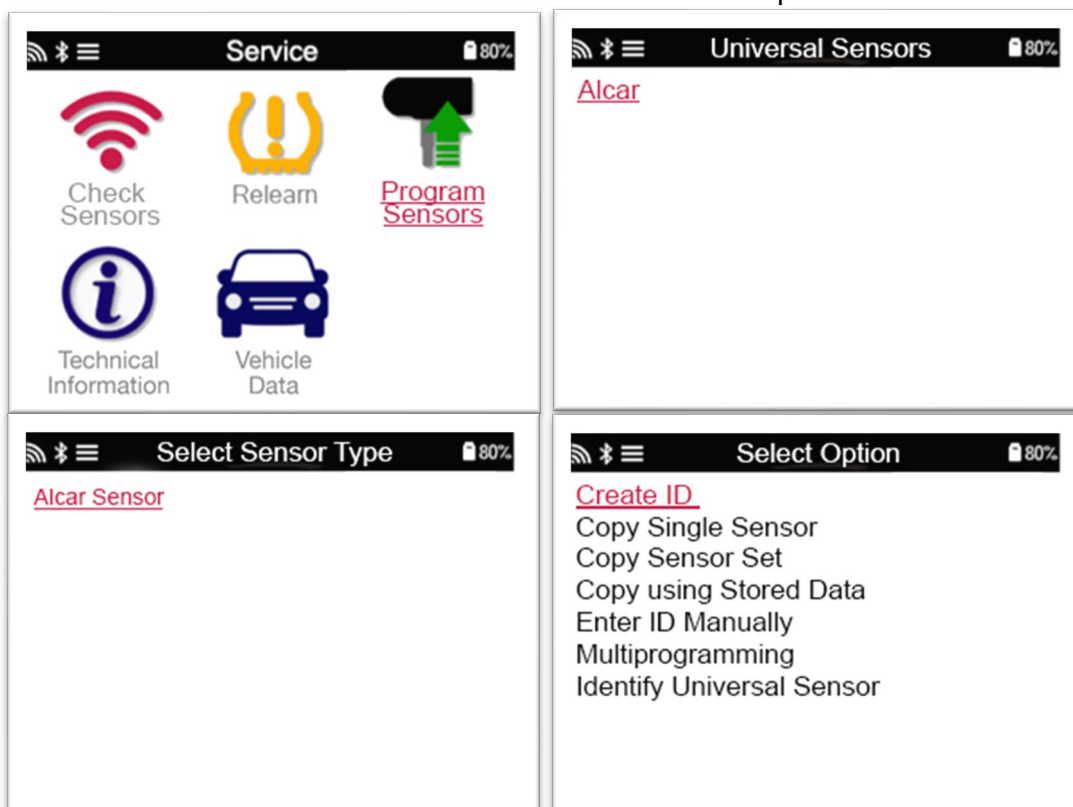

Copy Sensor Set	Used to Copy/Clone a winter tyre set with the same ID’s as the summer tyre set. Requires the reading of the old sensor to program the same ID on the replacement sensor to avoid the relearning process.
Create ID	Used to create a single sensor with a new ID. Can be repeated as many times as requested. The ID needs to be relearned to the vehicle’s ECU. The following pages will describe this procedure.
Copy/Clone ID	Used to Copy/Clone a single ID. Can be repeated as many times as requested. Requires the reading of the old sensor to program the same ID on the replacement sensor to avoid the relearning process.
Enter ID Manually	Used to create a Sensor with a new ID that can be typed in manually. This option only appears for some sensors. If it is not possible to copy the ID, enter the same ID manually, which is written on the sensors body.
Copy Using stored data	Gives you the option of using stored IDs either read from the TPMS sensors or from the vehicle OBD
Multiprogramming	Used to program 4 sensors at a time or 5 sensors for specific vehicles

The current coverage list is available at www.bartecautoid.com

The user has the option to either create or copy the ID.


Notice: Sensors need to be read before copying.

Sensors that can be programmed by the tool may have slightly different procedures and times.

Recommended sensor position for programming:



3/6 RELEARN

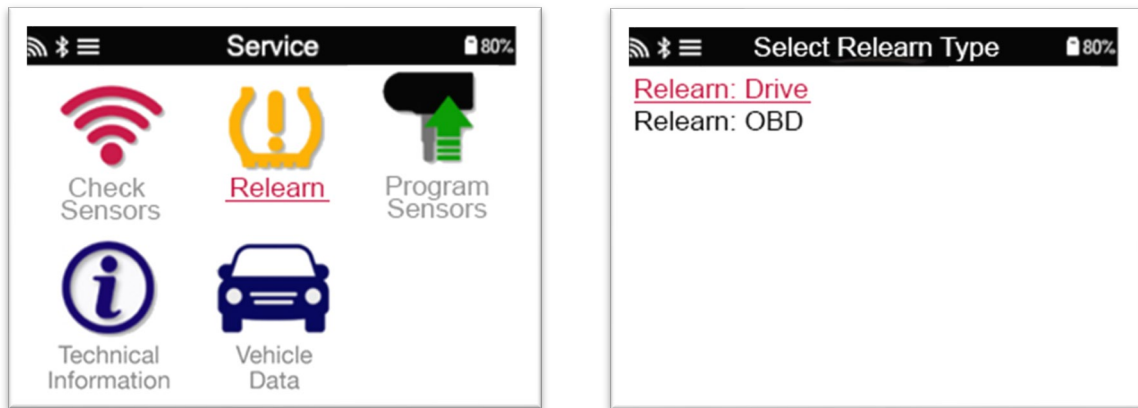

To find out which relearn type is available for a vehicle, just turn on the tool and select Relearn. Or refer to the current coverage list at www.bartecautoid.com > Downloads.

Stationary Relearns:

Stationary Relearns use the vehicles on-board TPMS system to listen for transmissions from sensors while the vehicle is in a "Learn Mode".

Once the vehicle is in Learn Mode, use the tool to activate the sensors. The vehicle will listen for the sensor IDs and learn them to the vehicle.

Active (Drive) Relearns:

Some vehicles can be reset by driving. Refer to the on-screen relearn procedures for details on how far/long to drive. It can take up to 20 minutes to relearn the sensor IDs.

OBD Relearns:

OBD connection allows the TECH600 to directly program the vehicle electronics module with sensor IDs.

Note that not all vehicles support vehicle communications modes.


OBD can be connected when all sensors are successfully read and the message "All Sensors OK" is displayed.

Please use the "Technical Information" menu and select "View Vehicle Info" to find the OBD location.

Relearn Information:

This contains extra information about the relearn for the selected vehicle, which can assist you if you have any problems. An example would be for some Toyota and Lexus vehicles which use a summer and winter tyre set.


After selecting a Relearn method, follow the instructions given by the tool to relearn Sensors.

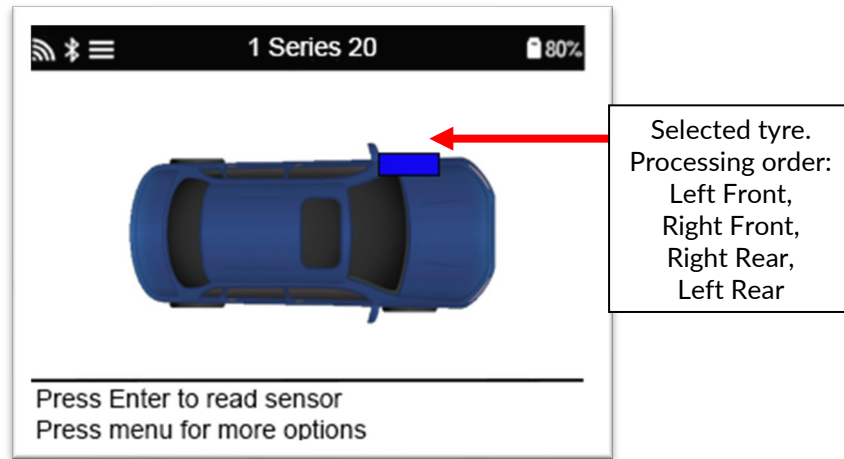


As well as the pressure and temperature, we also display the “mode” of the sensor. In some cases the mode cannot be changed and isn’t important, but in some cases it will need to be changed in order for the relearn to work.

For example if sensors for a vehicle show “Park” or “Drive” they are already in the correct mode. Otherwise use the “Mode Change” command in the Quick Access Menu. If the sensors are shown as Ship, Off or Test mode, put them in Park mode, using the “Mode Change” command in the Quick Access Menu



Press the  to access the Quick Access Menu and see the options available for the vehicle requiring a Relearn. Options that are not required on a vehicle will not be displayed.

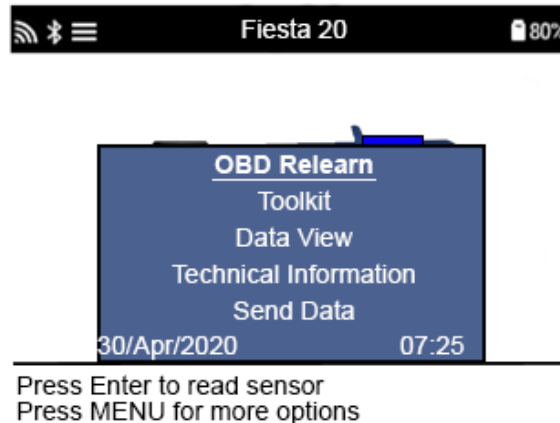

Special service advice for Toyota Models:

Toyota ECU Reset


If at any time the vehicle TPMS Reset button is pressed with the new sensor IDs fitted, the ECU OBD relearn will not work until the Toyota ECU Reset is selected (with the tool connected to OBD). The TPMS Reset button should only be used to set new tyre pressures, and on some vehicles to change between winter and summer ID sets.

Special service advice for Kia and Hyundai Models:

- **Reset YD Sensor** For some Kia and Hyundai vehicles with the newer low line TRW YD sensors, this allows you to put the sensors back into the correct mode (Sleep or Rest) to work with the vehicle.

These specific Service advices will only appear if applicable for the preselected Make, Model and Year combination.


4/6 OBD DIAGNOSTICS

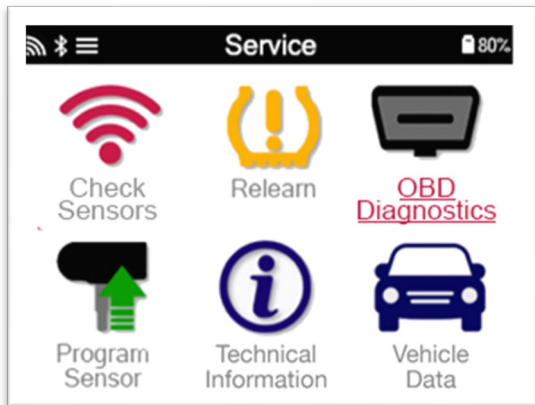



OBD Diagnostics

This option will only be listed for vehicles that Bartec has OBD coverage for. It reads information from the vehicle such as the VIN, DTCs (Diagnostic Trouble Codes) and the IDs of the sensors.

5/6 TECHNICAL INFORMATION

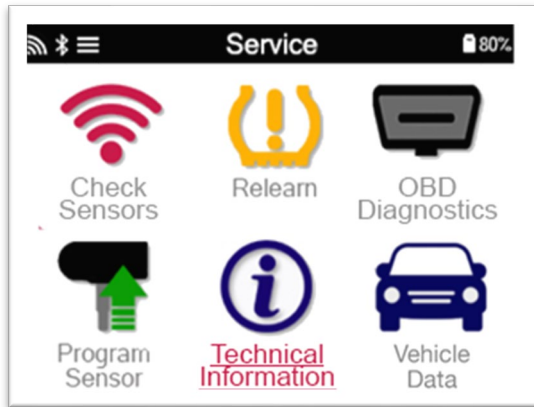


Technical Information Gives detailed information about replacement parts, service kits, sensors, vehicles and service tips.

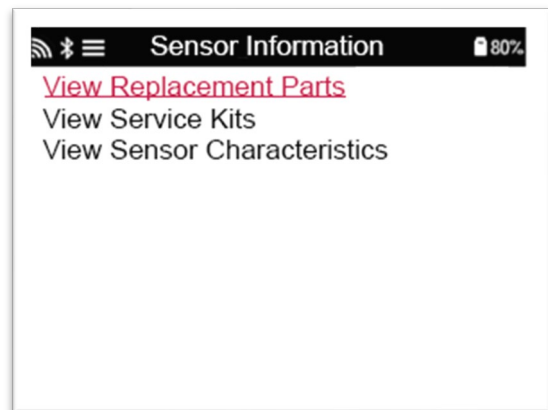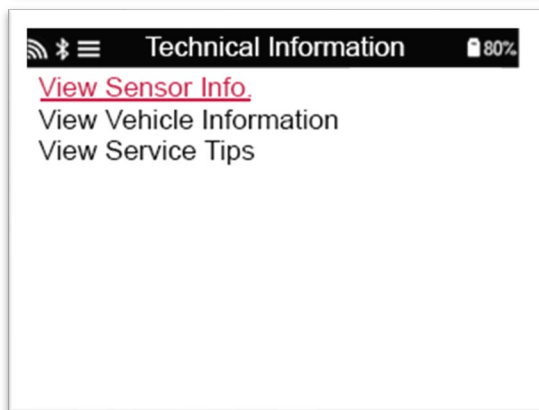


Sensors do not have to be read to access the following information.

View Replacement Parts	Used to show all Replacement Sensor part numbers that can be fitted to the preselected MMY
View Service Kits	Used to show all Replacement Service Kit part numbers that can be fitted to the preselected MMY
View Sensor Characteristics	Used to show technical sensor information of the sensor that needs to be fitted. e.g. Nut torque settings

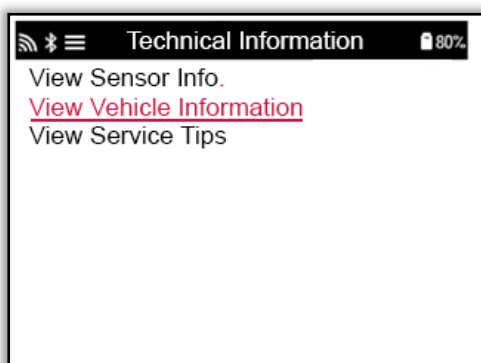


View Vehicle Information This option provides information about the Relearn method, the OBD port location and if there are programmable Sensors for the preselected MMY available.

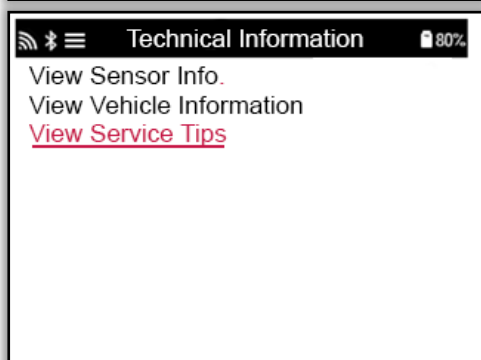

View Service Tips This option provides information about the specific meaning of the TPMS light as well as common mechanical faults for the preselected MMY.


6/6 REVIEW VEHICLE DATA

Sensors and OBD need to have been read for data to be shown.

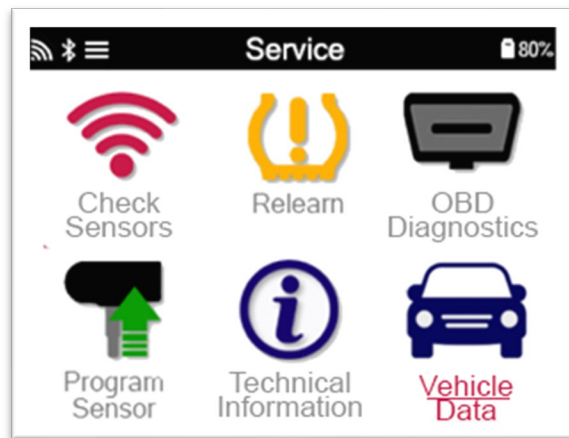

The menu gives direct access to specific screens that display the Vehicle data. This option is helpful if the user wants to have a second look at the Sensor and OBD Data.

SETTINGS

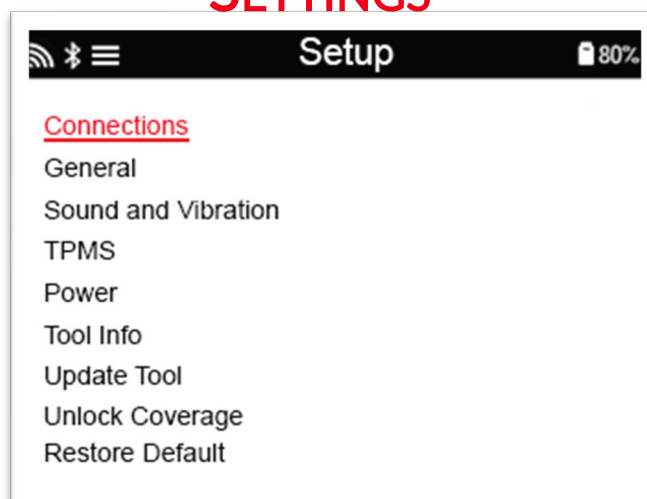

Connections	Connect to a Bluetooth OBDII Module, TPMS Desktop, and WiFi.
General	Check and update time and date on the tool, and change the language displayed
Sound and Vibration	Enable or disable tool sounds or vibrations
TPMS	Change the units displayed when reading a TPMS sensor, for Pressure, Temperature, and the TPMS ID
Power	Change the length of time before the tool automatically turns off
Tool Info	Display the tool info, including software version, serial number etc.
Update Tool	Update the tool to the latest software (requires the tool to be registered; see page 14).
Unlock Coverage	Allows the user to enter a code to unlock coverage on their tool.
Restore Default	Restore the tool settings to factory settings.

CONNECTING TO A WiFi NETWORK

After selecting **Connections** in the Settings menu, it is possible to choose between Bluetooth (OBDII Module and TPMS Desktop), and WiFi.

To connect to a WiFi network, highlight 'WiFi: Join Network' and press Enter. Select the correct available network displayed by highlighting it and pressing Enter. Use the directional arrow keys to navigate the keyboard. Enter selects the highlighted option. The return key returns to the previous screen. To confirm password entry and connect, navigate to the on screen return arrow and press enter.

When connected, it is possible to check for updates.

To go ahead, select 'Yes' and press enter. Select 'No' and press enter to return to the Connections screen.

Selecting WiFi again displays information on the network the tool is connected too, and allows the user to 'Forget' a network to connect to a different one.

CONNECTING TO THE BLUETOOTH OBDII MODULE

Step 1:

To connect the TECH600 to the Bluetooth (BT) OBDII module, select **Connections** in the Settings menu.

Step 2:

Turn the BT OBDII Module on by simply plugging it to the OBDII interface of any passenger vehicle. **ATTENTION:** It is necessary to plug the BT OBDII Module to a vehicle. Connecting it to a USB-cable will turn it on but you will not be able to connect the BT OBDII Module to the tool.

Step 3:

Once the TECH600 has discovered the BT OBDII module, it will display a list of all possible connections. From this list, select the item which begins with 'OBD' and ends with the BT OBDII module's serial number; ie: 'OBD 5100010001'. The BT OBDII module's serial number can be confirmed by checking the label affixed to the module.

Step 4:


Press enter to confirm and pair the TECH600 with the BT OBDII Module. A confirmation message will be displayed when the connection is successful.

To disconnect the TECH600 from the BT OBDII Module, go to Settings > Connections > OBDII Module, and press enter to disable the connection.

TPMS DESKTOP

The TPMS Desktop provides revolutionary technology to help manage Bartec TPMS tools on a PC. The TPMS Desktop is designed to work with the following Bartec tools; TECH400, TECH500, TECH600, TECH300, and the TAP100/200.

Go to www.tpmsdesktop.eu to download your FREE copy now!

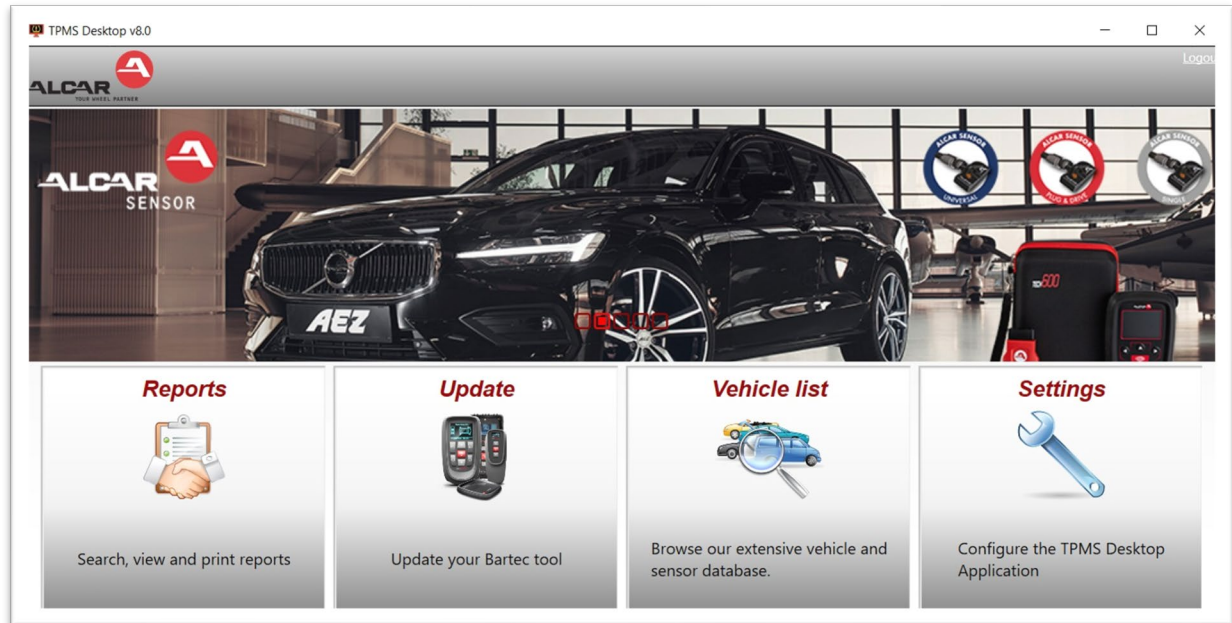

Reports	Complete job reports recorded and stored when needed
Update	Automatically retrieve update files from the current registered account
Vehicle List	Lookup TPMS information for a vehicle quickly and easily
Settings	Configure settings for Bluetooth and WiFi configuration
Display	Software available to display vehicle details, tyre pressure and tread depth readings on a TV or Monitor for Tyre shop garages or waiting rooms

REPORTS

Search, view and print job reports. This preformatted and detailed record contains the necessary job information needed for users and customers! To sort or filter reports by date, make, model and year. Or to print a report and attach it to the invoice as proof of work completed. Reports can be used to create customer receipts and limit liability.

UPDATE

Register and update the Bartec Tool with the latest software. This feature helps to keep control of all tools in use and updates them with the most current software available. Simply connect the tool to a PC with TPMS Desktop installed and click *Update*. This is the preferred method for updating the TECH600.

VEHICLE LIST

Browse the extensive vehicle and sensor database. Search by make, model and year to quickly find the data needed: OBD location, TPMS relearn, sensor information – it's all there with TPMS Desktop. Plus, the database is regularly updated.

SYSTEM SETTINGS

Configure the TPMS Desktop Application to meet the tyre shop's needs. Want to connect with Bluetooth. Connectivity is just a few clicks away with TPMS Desktop.

DISPLAY

Garage/Tyre shop display screen functionality enables the technician to show the customer their vehicle readings on a TV or monitor in the garage or waiting room. Gives the customer more confidence and sells more tyres.





The TECH600 will connect wirelessly to the TPMS Desktop using Bluetooth technology. While this will work easily with most computers, some have software which can be difficult to setup. In these rare circumstances, or if the computer does not support Bluetooth, a Bluetooth adaptor will be used. Additional information on how to install an adaptor can be found on the Bartec support website: tools.bartecautoid.com

Bluetooth® SETTINGS


To be able to use the TECH600 with Bluetooth, the tool first needs to be configured. Go to Settings > Connections > "TPMS Desktop: Add device" The Tool will then attempt to connect with TPMS Desktop on the PC.

If there are problems using the built-in Bluetooth, the user can use a USB dongle. Select Devices and Printers in Control Panel.

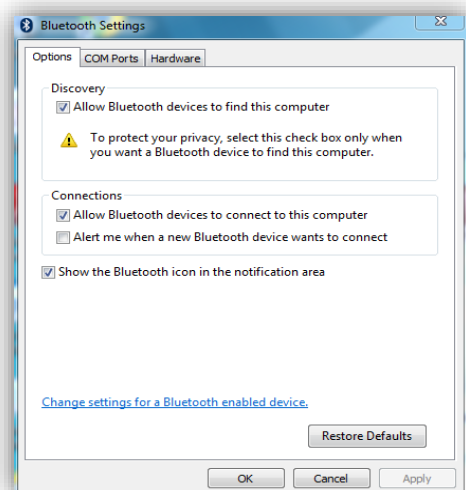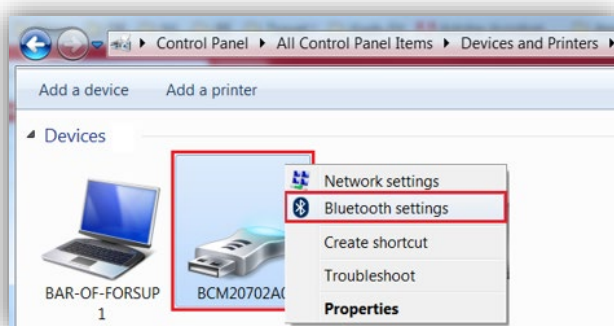

Right click on the Bluetooth dongle icon and click on Bluetooth settings. Tick the boxes as seen on the Options tab above. Press OK when finished.

Start the TPMS Desktop application and go to Settings. Open the Bluetooth section: the PC/Laptop should be **connectable** and **discoverable** for the TECH600.

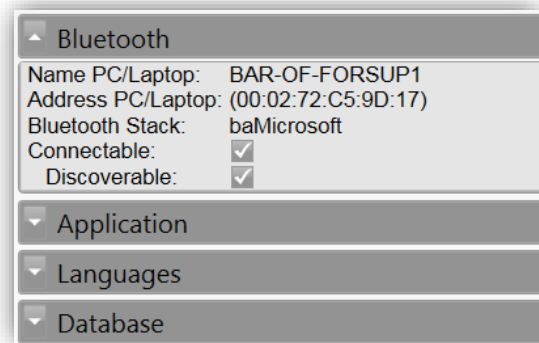

UPDATING THE TOOL VIA USB CABLE

The tool is compatible with PCs running Windows operating systems.

Step 1:

Power on the TECH600 and connect to a PC. The Tool will display a USB icon, to indicate that it is ready to receive update files.

Step 2:

Navigate to TPMS Desktop, and login. If the User does not have TPMS Desktop or has not registered the TECH600, please refer to the **Registration** pages in this document.

Step 3:

TPMS Desktop will check for the latest available update for the TECH600. If there is an update available, a notification will be displayed. Select 'OK' to confirm that the update can be applied to the tool.

Step 4:

TPMS Desktop will download the update files to the TECH600. When the files have been successfully downloaded, the TECH600 will install the files. Do not unplug the tool before the update has completed.

IMPORTANT: Please ensure that you "safely eject hardware" from the PC before unplugging the TECH600. This is to prevent data on the tool from being corrupted.

Step 5:

The tool is now updated and ready to go. The user can confirm that the tool is up to date via TPMS Desktop. The software version can also be checked in the Tool Info screen.

Trouble Shooting Tips:

- If Windows does not recognize the tool, please check that the USB cable is connected, that the tool is in update mode, and that there are no unnecessary update files on your PC available.

- If the tool becomes corrupted after being disconnected from the PC without safely ejecting it, the user can perform a check to attempt to fix the issue. To do so, right click on the drive you wish to scan, and navigate to “Properties”. Select “Tools” from the available options, and then select “Check”, to allow the PC to begin checking the device.

UPDATING YOUR TOOL VIA WIFI

Once the tool is set up to connect to WiFi network, it will be ready for updating via WiFi. In the Settings menu, go to ‘Update Tool’ and press enter. The TECH600 will then check for updates.


UPDATING THE OBD II MODULE

Step 1:

Follow the steps in ‘[Updating the Tool Via USB Cable](#)’ or ‘[Updating your Tool Via WiFi](#)’.

Step 2:

If an update for the Bluetooth OBDII module is required, the following screen will be displayed:

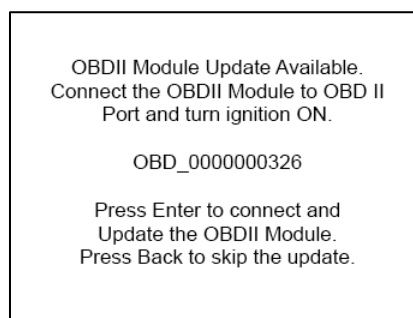


Step 3:

Connect the OBDII module to a vehicle and set ignition to ‘On’. Do not start the engine. Press ‘Enter’ to connect the TECH600 to the OBDII module and proceed with the update. It is advised that the OBDII module be kept up to date.

Step 4:

The following screen will be displayed.

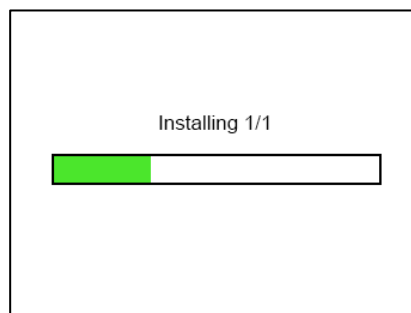

Please do not disconnect the OBDII module from the vehicle, turn off the TECH600, or otherwise stop the installation of the update while this screen is displayed.

Step 5:


When instructed, disconnect the OBDII module from the vehicle. The TECH600 will display an “installation complete” screen. The Bluetooth OBDII module is now updated.

APPENDIX

APPENDIX A: Vehicle Identification Number (VIN)

When using the TECH600 tool, it is important for the user to verify the Model Year to help insure looking for that proper sensor and using the proper vehicle COMs when necessary.

By using the vehicles VIN and locate the 10th digit from the left the user can in most cases accurately determine the vehicle's Model Year. Take that digit and reference the chart on this sheet. This will be the Model Year which needs to be selected on the tool.

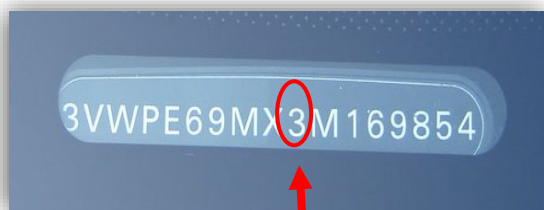

3 = 2003

10 th Digit in VIN	Year
W	1998
X	1999
Y	2000
1	2001
2	2002
3	2003
4	2004
5	2005
6	2006
7	2007
8	2008
9	2009
A	2010
B	2011
C	2012
D	2013
E	2014
F	2015
G	2016
H	2017
J	2018
K	2019

APPENDIX B: TPMS SYSTEM REVIEW



When cycling the ignition for off to run, the TPMS tell-tale should come on, and go off. This would indicate a system with no fault present.

Solid Light: Pressure Problem	Check the tyre pressures, and adjust to placard. NOTE: Some vehicles are equipped with sensors in the spare. Also, with some vehicles, over pressure may turn on the light.
--------------------------------------	---

Flashing Light: System Problem	System problems can range from faulty sensor(s) to sensors on the vehicle that haven't been learned to that vehicle.
---------------------------------------	--

APPENDIX C: MODES and MODE CHANGING

Sensors can have many different “modes” when they have been read, such as Learn, Tool LF, YD Sleep, YD Rest, Hi Norm Dly. Some of those are called sleep mode to preserve battery life.

Mostly, these modes are not important because the sensor will be supplied already in the correct mode to use. But for some sensors made by Continental it is important that the mode is displayed as “Park”, as otherwise it will not work on the vehicle.

The TECH600 tool has the ability to perform the necessary mode change. If a sensor is shown as “Ship”, “Test” or “Off” and the relearn toolkit provides the option “Set Sensor to Park Mode”, please use this option to change the sensor mode into the correct one:

- Go to “Relearn” and select vehicle (MMY).
- Press enter when relearn procedure shows.
- Select the spanner in the upper left corner with the Up/Down buttons. Press Enter.
- Select “Set Sensor to Park Mode”, press Enter.
- Go to the wheel, hold the tool near the sensor and press “Test”.
- Repeat for each wheel.
- Start the Relearn procedure.

Also, some sensors are supplied in a mode where they cannot be read by the tool unless they are pressurized in a wheel. Some examples would be replacement sensors bought from a Ford dealership, and some Mitsubishi Continental sensors.

APPENDIX D: COMMS ERROR TROUBLESHOOTING

If a problem or error occurs during the COMMS process, follow the steps below before calling customer support.

Check vehicle ignition

Vehicle ignition must be in the RUN position in order for vehicle COMMS process to complete.

Check cable to tool connection

Insure the cable is connected at the DB15 and thumb screws are finger tight.

Check cable connection at vehicle

Make sure BT OBDII Module connection is good.

Verify Make, Model, and Year

COMMS can change from Model to Model, and Year to Year. Verify the tool is set-up to the proper MMY.

Verify tool power level

If the tool has a low battery charge, this may affect the COMMS process. Charge tool and try again.

TECHNICAL SPECIFICATION

Power Supply	Lithium Polymer rechargeable battery, not user serviceable
Max power consumption	1.5W Schrader TPM, 0.5W all others
Display	LCD 16-bit colour, graphic, resolution 320x240
Keyboard	7 keys, dust, water and grease-resistant
Input/output	Micro-USB style USB used to Connect to PC for firmware update and audit file download.
Vehicle connection	Uses Bluetooth to connect to an BT OBDII Module
Working environment	Temperature 0°C - 40°C, Humidity: 20-55%
Storage environment	Temperature -10°C - 50°C, Humidity: 20-60%
Dimensions	187mm x 107mm x 47mm
Weight(including batteries)	490g

Radio frequency bands in which this equipment operates:

2.4GHz - 32mW maximum power output

315-433MHz - receive only

125KHz - 15uT @ 8cm maximum magnetic field

Simplified EU Declaration of Conformity

Bartec Auto ID Ltd hereby declares that this device is in compliance with the essential requirements and other provisions of Directive 2014/53/EU (RED).

The full text of the EU Declaration of Conformity is available at:

<https://www.bartecautoid.com/pdf/simplified-eu-declaration-of-conformity.pdf>

Simplified UK Declaration of Conformity

Bartec Auto ID Ltd hereby declares that this device is in compliance with the essential requirements and other provisions of The Radio Equipment Regulations 2017.

The full text of the UK Declaration of Conformity is available at:

<https://www.bartecautoid.com/pdf/simplified-eu-declaration-of-conformity.pdf>

